



72000AB & 74000AB Wall Box Time Switches

INSTALLATION

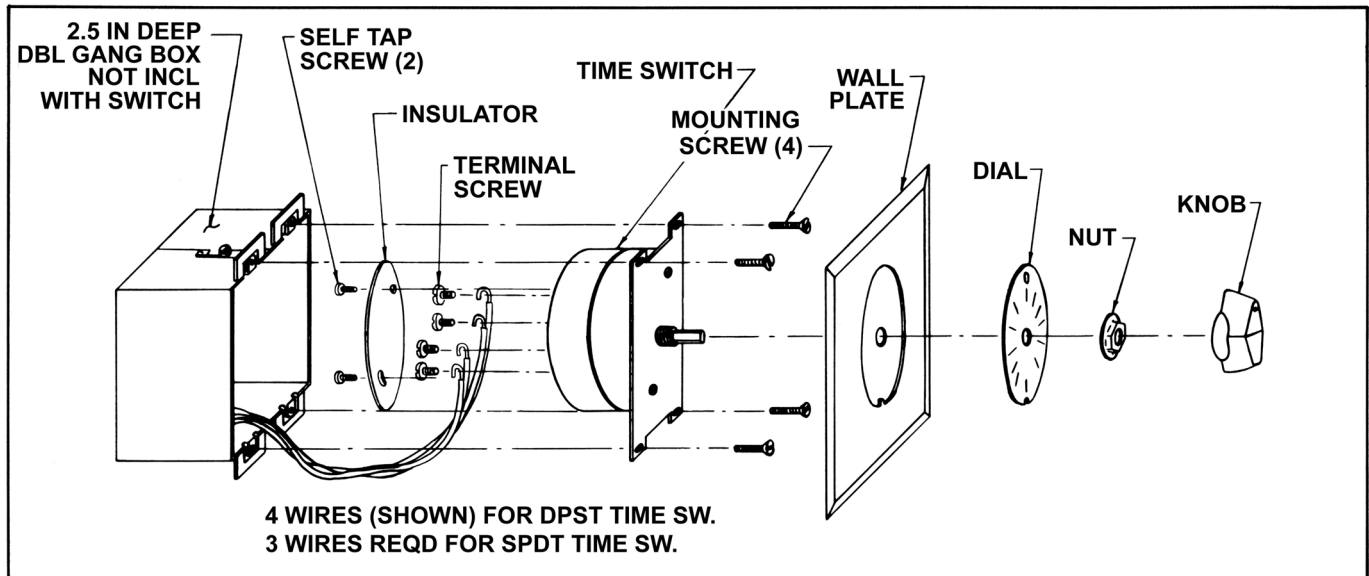


NOTE: INSTALLATION BY A LICENSED ELECTRICIAN IS RECOMMENDED. INSTALLATION AND USE OF THIS EQUIPMENT SHOULD BE IN ACCORDANCE WITH PROVISIONS OF THE U.S. NATIONAL ELECTRICAL CODE, APPLICABLE LOCAL CODES, AND PERTINENT INDUSTRY STANDARDS.

- 1) **TURN POWER OFF** at circuit breaker or fuse panel.
- 2) Attach wires to terminals with screws provided and screw down tightly. (See wiring diagrams.)
- 3) Cover wired terminals with insulator using self tapping screws provided. (Protection against shorts.)
- 4) Groom wires carefully for insertion of wired assembly into wall box. Fasten with four mounting screws provided.
- 5) Place wall plate, then dial over timer shaft & threaded bushing with the "O" of the dial at the top, and fasten with nut provided.
- 6) Push knob on timer shaft with pointer toward "0".
- 7) **Turn power ON** at circuit breaker or fuse panel.

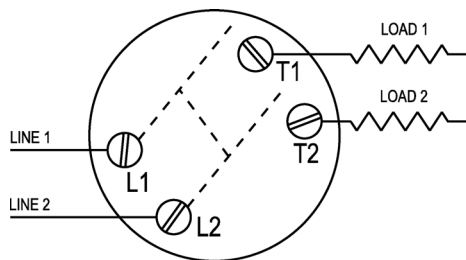

**Wiring Diagram
72000AB DPST
(Rear View)
Contact Positions at time "0"**

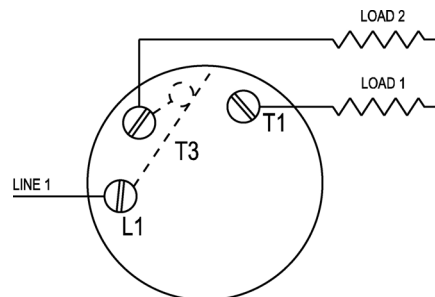

**Wiring Diagram
74000AB SPDT
(Rear View)
Contact Positions at time "0"**